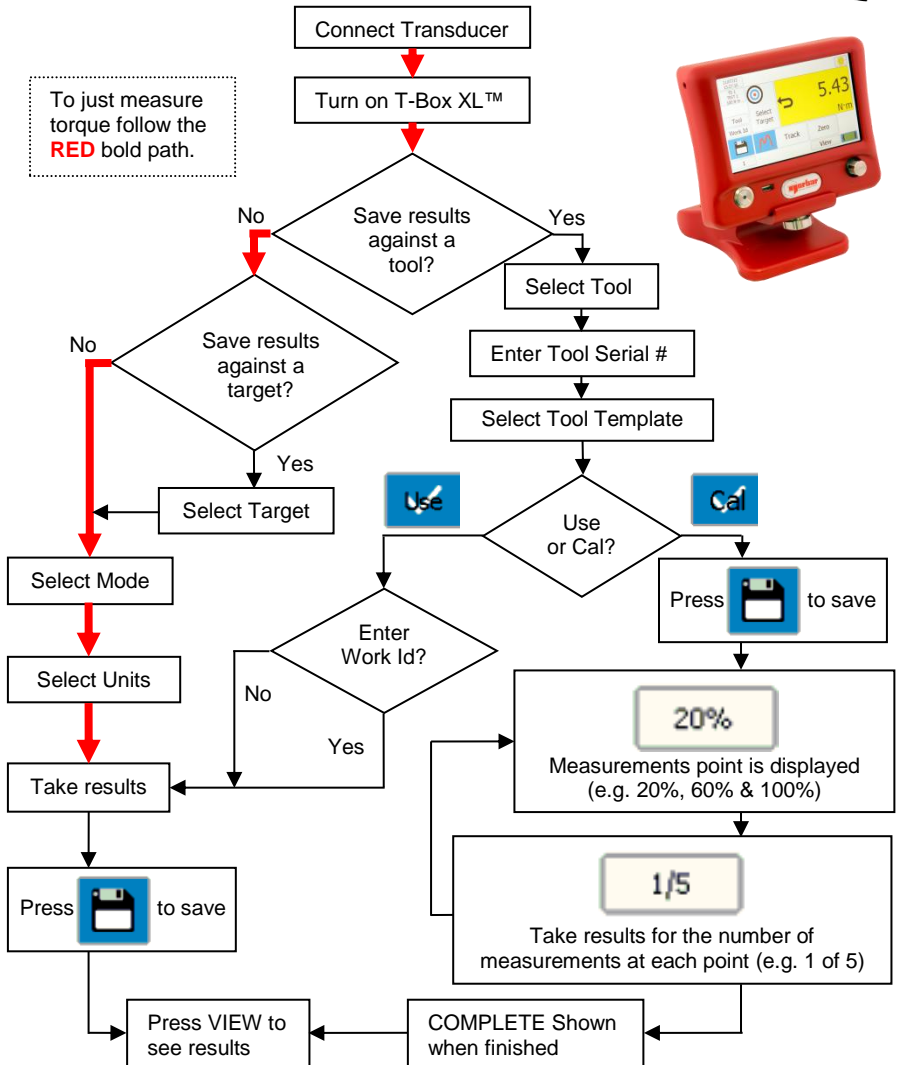


























 

 
 

 
 

 
QUICK REFERENCE GUIDE



T-BOX XL™



T-Box XL™ Guide

| | | | | |
|--------|---|---|---|---|
| Step 1 |        | | | OPERATOR'S MANUAL # 34396 |
| Step 2 |  | <p>MAX 10 N·m</p>  | OR |  |
| Step 3 |  |  | TD1 |  |
| Step 4 |  | <p>9V DC 3A (MIN)</p> |  <p>3h 20m</p> |    |
| Step 5 |  |  <p>OFF ON</p> |  |    |
| Step 6 |  |  |  | |
| Step 7 |  |  |  | |
| Step 8 |  |  |  | |

TDMS Guide

| | | | | |
|--------|---|--|--|---------------------------|
| Step 1 |        | | | OPERATOR'S MANUAL # 34342 |
|--------|---|--|--|---------------------------|

NORBAR TORQUE TOOLS LTD, Wildmere Road, Banbury, Oxfordshire, OX16 3JU, UNITED KINGDOM

Tel: + 44 (0) 1295 270333

Email: enquiry@norbar.com

www.norbar.com

© Norbar Torque Tools 2014