


QUICK START

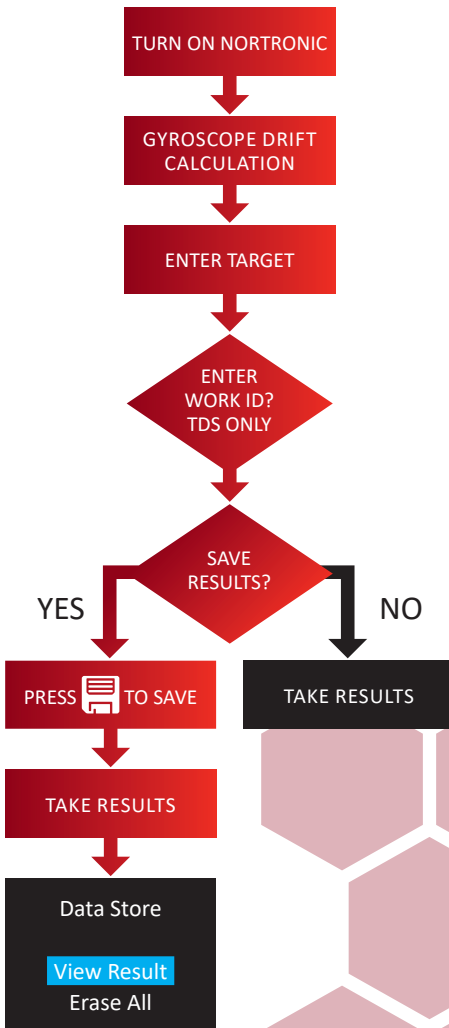

NORTRONIC® QUICK REFERENCE GUIDE


















www.norbar.com



NORTRONIC® QUICK REFERENCE GUIDE



www.norbar.com/HowtoUseANorTronic

<p>STEP 1</p>	       <p>OPERATORS MANUAL #34399</p>	
<p>STEP 2</p>		<p>Do Not Move</p> <p>Start 5</p>
<p>STEP 3</p>	<p>Do Not Move</p> <p>Calculating</p> 	<p>No Target</p> <p>0°</p> <p>0.0</p> <p>N·m</p> 
<p>STEP 4</p>	<p>TARGET</p> <p>SETUP</p> <p>DATA STORE</p> <p>ABOUT</p>	
<p>STEP 5</p>	  	<p>Set Target</p> <p>N·m</p> <p>0.0</p>
<p>STEP 6</p>		<p>T = 330</p> <p>332.1</p> <p>N·m</p> 