

TRUCHECK™ 2

QUICK REFERENCE GUIDE




OPERATOR'S MANUAL

www.norbar.com/Downloads/Manuals

Part Number	43514 / 5	43516 / 7	43518 / 9	43520 / 1	43522 / 3	43524 / 5	43528 / 9	43530 / 1	43532 / 3
Capacity	3 N-m	10 N-m	30 N-m	65 N-m	260 lbf-ft	350 N-m	800 lbf-ft	1,100 N-m	2,100 N-m
Max Torque	3.6 N-m	12 N-m	36 N-m	78 N-m	312 lbf-ft	420 N-m	960 lbf-ft	1,320 N-m	2,310 N-m

<p>PRESS Changes Units</p> <p>UNITS</p> <p>PRESS & HOLD Units Menu</p>	<p>PRESS Changes Mode</p> <p>MODE</p> <p>PRESS & HOLD Click Menu</p>	<p>PRESS Changes Target</p> <p>TARGET</p> <p>PRESS & HOLD Target Menu</p>	<p>PRESS Resets Peak or Zeroes Reading</p> <p>RESET</p> <p>PRESS & HOLD Version Screen</p>
---	---	--	---

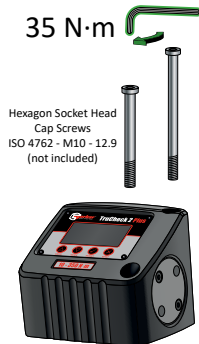

<p>PRESS Zeroes Reading</p> <p>PRESS & HOLD Version Screen</p>	<p>RESET</p>	<p>TARGET</p>
<p>EXIT</p>	<p>TruCheck™ 2 Plus</p>	
<p>EXIT</p>	<p>5 Seconds</p> <p>SETUP MENU</p>	<p>TruCheck™ 2</p>

NORBAR TORQUE TOOLS LTD, Wildmere Road, Banbury, Oxfordshire, OX16 3JU, UNITED KINGDOM

Tel: + 44 (0) 1295 270333 | Email: enquiry@norbar.com

www.norbar.com

